

# MSO-09D-N1G7N2.52P

## 1.Type

MSO	Open
MS	Enclosure
MS1	Enclosure with push button

## 2.Capacity

MSO	C-06D-C-100D
MS	C-09D-C-35D
MS1	C-09D-C-35D

## 3.Cover Model

none	Normal
N	Lock
R	Reset
G	Start Only
S	Stop Only

## 7.Phase-Failure Protection

2P	2 Heaters
3P	Phase-Failure

## 6.Overload Relay

M	MTH
N	NTH
T12	TH12
T20	TH20

## 5.Coil Control Voltage

12V:Y	100V:W	190V:F	227V:X	400V:K	480V:N	600V:Q
24V:A	110V:D	200V:R	230V:H	415V:L	525V:O	
42V:B	115V:T	208V:U	240V:I	440V:M	550V:V	
48V:C	120V:E	220V:G	380V:J	460V:S	575V:P	

## 4.Phase

1	Single Phase
2	Single Phase Terminal Jumper
3	3 Phase

Seria MSO/MS/MS1